





Issue date 2023-10-25

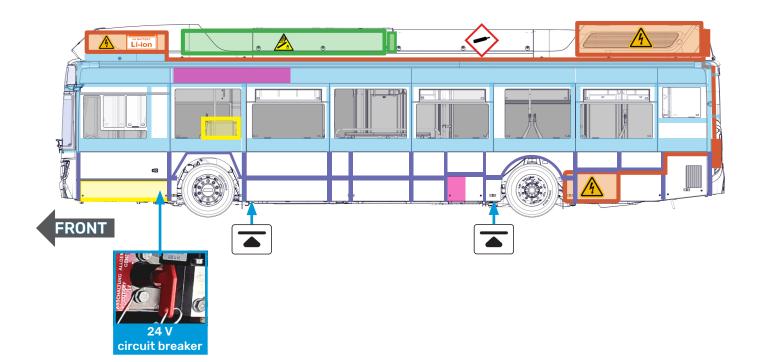

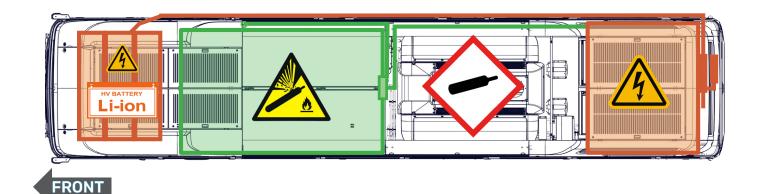



SPECIAL ATTENTION ITEMS





Quick Emergency Guide

Issue date 2023-10-25



Li-ion

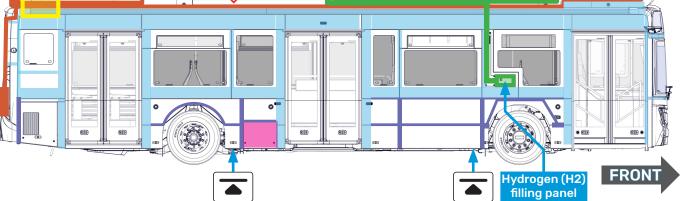

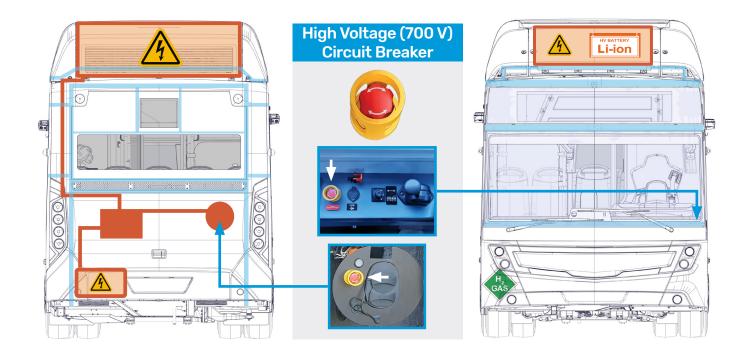


SPECIAL ATTENTION ITEMS






<mark>Issue date</mark> 2023-10-25

DOOR OPENING IN AN EMERGENCY

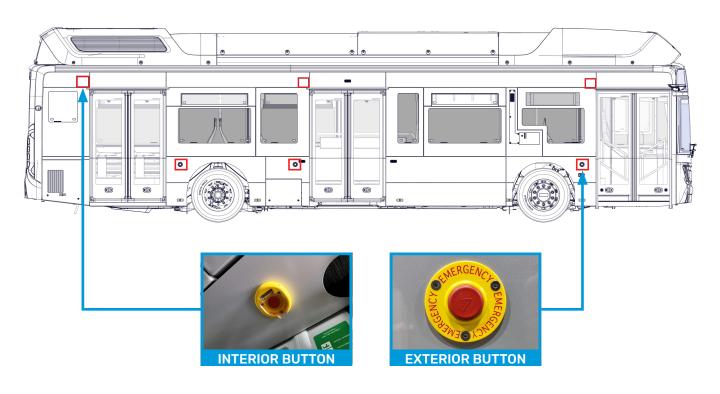

PRESSURE RELIEF DEVICES (PRD)

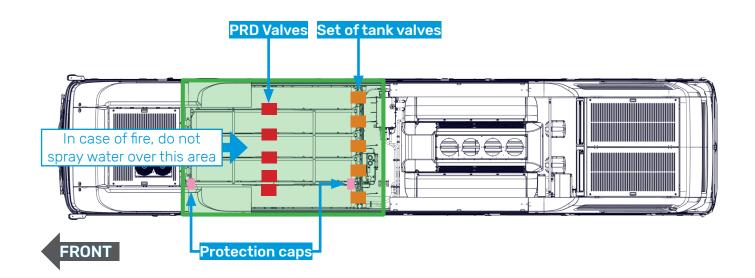


<mark>Issue date</mark> 2023-10-25




IMMOBILIZATION

CaetanoBus

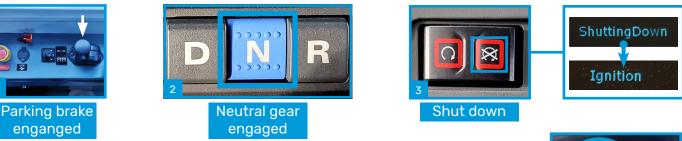



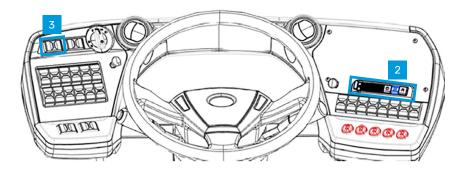



TOWING

Method	Illustration	Conditions
Flatbed trailer		No limitations
Front towing point *		Remove drive shaft or both flange shafts
Raised front *		 Remove drive shaft or both flange shafts Air suspension set to max. level **
Rear towing point *		Only for removing from parking bay if the front towing point is unaccessible
Raised rear		Not possible

* If it's not possible to remove the drive shaft or flange shafts, speed must always be < 5 km/h and the towing distance must not exceed 10 km.

** During the towing, enough ground clearance must be guaranteed to prevent the underbody from colliding with the ground; special attention must be taken during surface transitions (flat to uphill, uphill to flat, flat to downhill and downhill to flat).